

Register your product and get support at
www.philips.com/welcome

HP8230


HP8232








HP8233

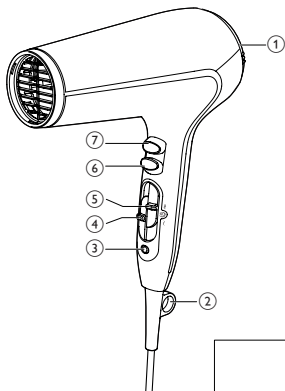

EN User manual

PHILIPS



	HP8230	HP8232	HP8233
 (14mm)	✓	✓	✗
 (11mm)	✗	✗	✓
	✗	✗	✓
	✗	✓	✗
 (7)	✓	✓	✓
 (6)	✗	✗	✓
IONIC  (3)	✗	✗	✓

English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.



- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

Noise Level: $L_c = 83\text{dB [A]}$

Electromagnetic fields (EMF)

This appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Environment

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. when this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EU.



Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

2 Dry your hair

1 Connect the plug to a power supply socket.

2 Adjust the airflow switch (④) to **I** for gentle airflow and styling, or **II** for strong airflow and fast drying.

Tip: You can also use the turbo button(⑥ , HP8233 only) for an extra powerful airflow.

You can use the speed setting **I** for a more convenient quiet drying.

3 Adjust the temperature switch (⑤) to ☼ for hot airflow, ☺ for warm airflow, or ☹ for efficiently drying your hair at a constant caring temperature. Press the Cool shot button (⑦) for cool airflow to fix your style.

- **HP8232/33 only:** The appliance with ionic function provides additional shine and reduces frizz.
- **HP8232 only:** The ionic function automatically activates when the appliance is switched on.
- **HP8233 only:** To turn the ionic function on or off, adjust the ionic slide switch (③) to **I** or **O**.

➞ The ionic function may produce a special odor. It is normal and caused by the ions which are generated.

Nozzle

(HP8233 only) With the ultra slim styling nozzle, air is more concentrated while you are drying your hair. It is easier to style straight hair.

Volume diffuser (HP8232/33 only):

The volume diffuser is specially developed to gently dry both straight and curly or wavy hair.

- 1 To enhance your natural volume and maintain your curls, hold the dryer vertically to dry your hair.
- 2 To add volume at the roots, insert the pins into your hair in such a way that they touch your scalp.
- 3 Make rotating movements with the appliance to distribute the warm air through your hair.

Tips (HP8233 only) : You can enjoy a massaging function with diffuser thanks to its caring soft pins.

After use:

- 1 Switch off the appliance and unplug it.
- 2 Place it on a heat-resistant surface until it cools down.
- 3 Take the air inlet grille (①) off the appliance to remove hair and dust.
 - ↳ Rotate the air inlet grille anti-clockwise to take it off the appliance.
 - ↳ Rotate the air inlet grille clockwise to reattach it to the appliance.
 - ↳ Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (②).

3 Guarantee and service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.



All registered and unregistered trademarks are property of their respective owners.

© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.

3140 035 31502

